BK RESOURCES

888-310-4393 | www.bk-resources.com

Stationary Gas Hose


FOR STATIONARY COMMERCIAL EQUIPMENT



INSTALLATION INSTRUCTIONS

GAS HOSE CONNECTION KIT INSTRUCTIONS

PARTS LIST

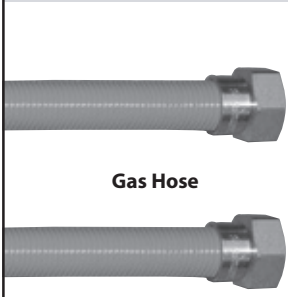

Gas Hose



Male Connector



Female Connector



Optional Shut-Off Ball Valve
BKG-BV



Optional Quick DisConnect
BKG-QDC

NOTE: Optional Quick Connect Device must be appropriately sized to the Gas Hose.

WARNING


Read and follow all instructions carefully. Failure to do so could result in severe injury or death.

1. Installation must comply with the National Fuel Gas Code (ANSI Z223.1) as well as any local gas installation codes. The optional Quick Disconnect complies with ANSI Z21.41 • CSA 6.9 for use with gas fuel appliances.
2. It is REQUIRED that all installation as well as testing be done by qualified personnel.
3. Using strong cleaning products for the connection points may cause permanent damage. We recommend that mild cleaning products are used to clean the connections and rinsed with water immediately following. It is important that the connection points are rinsed with water immediately if in contact with any cleaning chemicals.
4. An approved manual gas shut-off "Ball Valve" is required to be installed at the connection point from the gas line to the gas hose before each Gas Hose connection and must be located within 6" of the appliance attached to. BK Resources offers shut-off Ball Valves if needed. Contact us to order.
5. The gas outlet connection point may not be hidden in or covered by or within any drywall, flooring or partitioned walls.
6. **CAUTION** -It is IMPORTANT to follow the gas flow arrows indicated on the optional Quick Disconnect. Verifying the gas flow arrows prior to operation is imperative.
7. **CAUTION** - The optional Quick Disconnect Is not for use with any Dual Fed gas manifold line-up applications. Only the gas shut-off "Ball Valve" can be installed in this application due to gas being fed from 2 locations which prevents the gas safety shut-off "Ball Valve" feature in the optional Quick Disconnect from working properly.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

8. For stationary appliances, please avoid any unnecessary movement or vibration following the Gas Hose installation.
9. Prevent bending or flexing of the Gas Hose and its connection points. The connections must not be twisted, kinked or forced into any excessive bending which may strain and possibly damage the Gas Hose.
10. Following installation procedures, the connection **MUST** be tested for any leaks following National Fuel Gas Code ANS I Z233.1, NFPA 54, or SCA B149.1 Natural Gas and Propane Installation Code. The possibility for corrosion with the leak test solution can be prevented by rinsing with water following each test.
11. The final assembly **MUST** be checked for leaks.
    CAUTION - All open flames or other sources of ignition shall not be used for leak testing. Rinsing with water after leak testing will help prevent corrosion from any testing solutions. For tips on gas supply system leakage, see the National Fuel Gas Code, ANSI Z223.1/NFPA 54 or CSA B149.1, Natural Gas and Propane Installation Code.
12. The maximum fuel gas pressure to be used with the Quick Disconnect is 1/2 psi (3.5 kPa). Approved for 1st, 2nd and 3rd family gases under 50 mbar pressure.
13. Avoid contact with any foreign objects or substances. Avoid contact with anything over 110°C (230° F) when using the Gas Hose.
14. It is highly recommended that at the time of installation for the Gas Hose and any of it's connections should remain and NEVER be moved to other locations. A new Gas Hose and supporting installation hardware must be used for each application.
15. The optional Quick Disconnect has moveable internal parts that can be permanently damaged **DO NOT** make adjustments or repairs. Should a problem occur, immediately turn off the gas supply and contact qualified personnel to resolve the situation.
16. Avoid contact with objects, electrical wires, substances or situations which might damage your Gas Hose.

GAS HOSE CONNECTION KIT INSTRUCTIONS

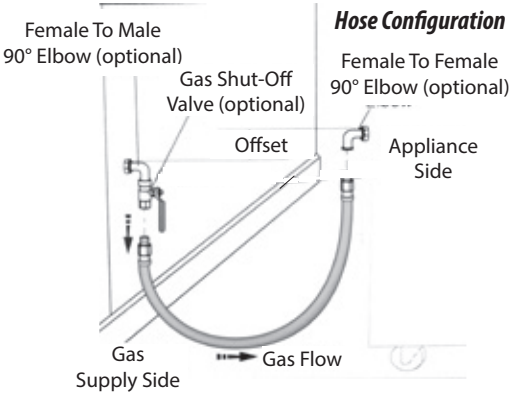

INSTALLATION GENERAL INSTRUCTIONS

Step 1: Before beginning your installation it is IMPORTANT to shut-off the main gas line and the connecting shut-off "Ball Valve". This is important before connecting the Gas Hose or optional Quick Disonnect to assure there is absolutely no gas flow. BK Resources offers shut-off Ball Valves if needed. Contact us to order.

Step 2: Due to the many variations from the main gas line to the equipment stub-out connection point, it is imperative that during installation the proper hose lengths are selected. The installer should ensure during installation that there are no kinks, twisting, or any excessive bending which may strain and possibly damage the Gas Hose. Please review the illustrations choosing the appropriate direction that suit the needs of the job.

Step 3: Offsetting the two ends of the Gas Hose from one another will minimize the distance between the appliance and the wall upon completion of the installation.

Gas Connector Installation Options

Depending on the model purchased, select the appropriate directions and follow the installation instructions closely.

Once you have completed the installation steps for the style you choose, you must go to the Completing the Installation Section on page 5 and follow the remaining required steps.


Tighten all connections using wrenches.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

⚠WARNING

- Do not use pipe thread sealant or Teflon™ tape on any flare ends because you will not obtain a leak free seal.
- Must use 100 ft / lb minimum torque when attaching the stationary gas hose to the fitting.

Connector Configuration

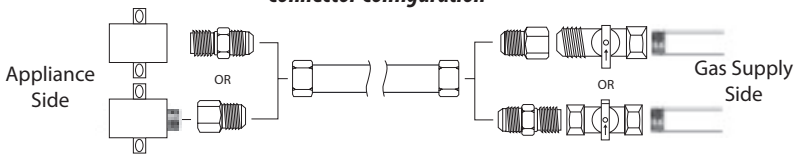

Appliance Side

Step 1: Determine the proper Male/Female threaded connection that is needed for you installation and test them for a proper fit prior to use.

Step 2: Apply pipe thread sealant or Teflon™ tape to all male threaded end of the connection being used. **(WARNING: do not apply sealant or tape to the flared end that will attach directly to the gas hose.)**

Step 3: Attach the proper connection to the appliance using two open ended wrenches and tighten securely.

Step 4: Attach the stationary gas hose to the fitting and tighten securely. (100 ft / lb minimum torque)*

Gas Supply Side

Step 1: Determine the proper Male/Female threaded connection that is needed and test it with the gas supply line to insure a proper fit.

Step 2: Apply pipe thread sealant or Teflon tape to all male threaded end of the connection being used. **(WARNING: do not apply sealant or tape to the flared end that will attach directly to the gas hose.)**

Step 3: Attach the proper connection to the gas supply line using two open ended wrenches and tighten securely.

Step 4: Attach the stationary gas hose to the fitting and tighten securely. (100 ft / lb minimum torque)*

Step 5: Go to **Completing the Installation** section below and follow the remaining required steps.

The final assembly must be checked for leaks.

Completing the Installation

Step 1: Ensure that all connections have been tightened using a wrench. (100 ft / lb minimum torque)*

Step 2: Perform a leak test following the regulations mentioned in Step 11-14 on page 3 under **WARNINGS**.


Step 3: Push the appliance back into its normal position and make sure that the connection is correctly positioned and is not experiencing any stress from over-bending or kinking.


The final assembly must be checked for leaks.

*(ft / lb = foot pounds of torque)


COMMON INSTALLATION MISTAKES


X No Sharp Bends

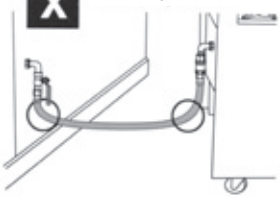

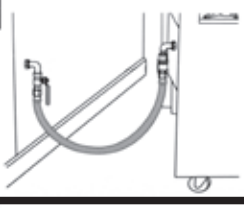



X No Sharp Bends

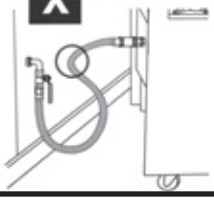

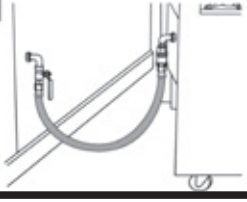


X No Twists

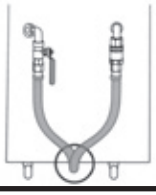


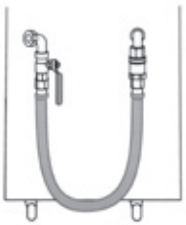


X No Double Bends

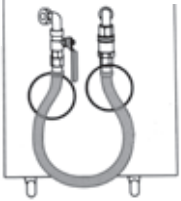

X Do Not Touch Floor

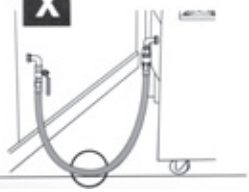

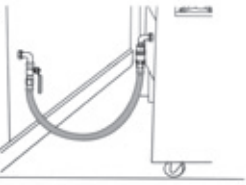

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

Minimum Connector Capacity					
Nominal Connector I.D., Inches	Straight Length Capacity - BTU Per hr (W), 0.64 Sp Gr, 1,000 BTU per Cu Ft (37.2 Mj/m3) Gas At 0.5 Water Column (124 Pa) Pressure Drop				
	Connector Length				
	2 Foot	3 Foot	4 Foot	5 Foot	6 Foot
1/2	150,000	125,000	106,000	93,200	86,600
3/4	290,900	255,900	215,000	197,400	173,900
1	581,800	515,900	442,700	398,900	347,800

Connector Capacity With Manual Shut-Off Valve					
Nominal Connector I.D., Inches	Straight Length Capacity - BTU Per hr (W), 0.64 Sp Gr, 1,000 BTU per Cu Ft (37.2 Mj/m3) Gas At 0.5 Water Column (124 Pa) Pressure Drop				
	Connector Length				
	2 Foot	3 Foot	4 Foot	5 Foot	6 Foot
1/2	159,000	124,000	110,000	100,000	91,000
3/4	367,000	329,000	280,000	238,000	242,000
1	813,000	702,000	660,000	560,000	524,000

Connector Capacity With Manual Shut-Off Valve And Quick Connect Device					
Nominal Connector I.D., Inches	Straight Length Capacity - BTU Per hr (W), 0.64 Sp Gr, 1,000 BTU per Cu Ft (37.2 Mj/m3) Gas At 0.5 Water Column (124 Pa) Pressure Drop				
	Connector Length				
	2 Foot	3 Foot	4 Foot	5 Foot	6 Foot
1/2	90,000	82,000	76,000	73,000	69,000
3/4	208,000	195,000	184,000	168,000	168,000
1	377,000	373,000	368,000	344,000	339,000

Capacity Chart developed using ANSI Z21,69 Specifications.

Note 1: Capacity was determined under the test conditions specified in ANSI Z21.69•CSA 6.16

Note 2: The capacity at 0.2 inches water column (50 Pa) pressure can be determined by multiplying by 0.632.

Note 3: For capacities under conditions other than noted above, the manufacturer or serving gas supplier should be contacted

Warranty

Seller warrants to the original purchaser that its Gas Hoses are all free of defects in material and workmanship for two years from the date of purchase. All other products, Shut-off Ball Valve, Quick Disconnect, Restraining cable, and Installation hardware are free of defects in materials and workmanship for one year from the date of purchase. Any warranty claim should be promptly reported by purchaser during the warranty period. If the product or any part is found by Seller upon examination to be defective in material or workmanship it will be repaired or replaced at Seller's option. Replacement of such equipment will be effectuated only upon return of the defective product with proof of purchase during the warranty period to seller at the following address: BK Resources 120 Frontage Rd, Altamont, IL 62411.

This limited warranty does not cover defects or damage which occurred during shipping or resulting from accidents, alterations, unauthorized repair, failure to follow instructions, misuse, wear and tear or acts of God.

Warranty Limitation and Exclusion

Seller's warranty obligation is limited to providing repair or replacement of Gas Hose and all other products during the warranty period at Seller's option.

Seller shall have no obligation to repair or replace Gas Hoses and all other products damaged during shipment or installation if not installed in accordance with standards set forth in the American Gas Association Standards or American National Standards.

Seller will have no further warranty obligation under this Agreement if any and all the equipment is subject to abuse, misuse, negligence or accident or if Purchaser fails to perform any of the duties set forth herein.

Disclaimer of Unstated Warranties

The warranty printed above is the only warranty applicable to this purchase. ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

Proposition 65

Proposition 65 Warning - California's Proposition 65 requires that California consumers receive warnings about any products which contain chemicals known to the State of California to cause cancer or birth defects or other reproductive harm. The State of California requires the following notice: WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

Limitation of Liability
It is understood and agreed that the seller's liability whether in contract, in tort, under any warranty, in negligence or otherwise shall not exceed the replacement of the defective product or part at Seller's cost (Labor and freight at Purchaser's expense) and under no circumstances shall Seller be liable for special, indirect, incidental or consequential damages. The price stated for the equipment is a consideration in limiting Seller's liability. No action, regardless or form, arising out of the transactions under this agreement may be brought by purchaser more than one year after the cause of action has accrued.

Disclaimer of Damages
SELLER AND ITS EMPLOYEES, AGENTS AND FRANCHISEES WILL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR OTHER INDIRECT OR SPECIAL DAMAGES SUFFERED BY BUYER, ANY OF ITS EMPLOYEES, AGENTS OR ANY OTHER PERSON, WHETHER ARISING UNDER CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY. Such damages include, but are not limited to, loss of profits, loss of use of the goods, damage to property, and claims of third parties.

Some States do not allow limitations or exclusions of consequential or incidental damages, or limitations on the length of an implied warranty, therefore, the above limitation or exclusion may not be applicable. Because rights vary from state to state you may have other rights under this warranty.

ANY WARRANTIES, REPRESENTATIONS OR STATEMENTS BY ANY AGENT OR REPRESENTATIVE OF BK RESOURCES THAT DIFFER IN ANY WAY FROM THE TERMS OF THIS WRITTEN AGREEMENT SHALL HAVE AND SHALL BE GIVEN NO FORCE OR EFFECT.

Limited Lifetime Warranty: Seller warrants the original purchaser that its BK Resources Gas Hoses will not leak under normal use for the life of the appliance that it is attached to. Although a leak is highly unlikely, a new Gas Hose will be sent out at no charge to the original purchaser as a replacement in the off chance one of our Gas Hoses experiences a leak.

Thank you for your purchase of this superior quality BK Resources Gas Hose.

BK RESOURCES

888-310-4393 | www.bk-resources.com

Tuyau de Raccordement de Gaz

POUR ÉQUIPEMENT COMMERCIAL FIXE



INSTRUCTIONS D'INSTALLATION

LISTE DES PIÈCES



Tuyau de Raccordement





Raccord Mâle



Raccord Femelle



Vanne à Boule (optionnelle)
BKG-BV



Raccord Rapide (optionnel)
BKG-QDC

REMARQUE : La taille du Raccord Rapide doit être adaptée au Tuyau de Raccordement.

ATTENTION


Lisez et suivez attentivement les instructions. Le non-respect des instructions peut entraîner des blessures graves voire mortelles.

1. L'installation doit se conformer aux normes du National Fuel Gas Code (ANSI Z223.1) ou, à défaut, aux normes locales d'installation du gaz. Le Raccord Rapide est conforme à la norme ANSI Z21.41 • CSA 6.9, si utilisé avec des appareils à gaz.
2. L'installation et les essais doivent IMPÉRATIVEMENT être effectués par des professionnels qualifiés.
3. L'usage de nettoyants puissants sur les points de raccordement peut entraîner des dommages irréversibles. Nous vous recommandons d'utiliser un nettoyant doux et de rincer à l'eau immédiatement. Il est important de rincer les points de raccordement juste après qu'ils aient été en contact avec un nettoyant chimique.
4. Une Vanne à Boule agréée doit être installée au point de raccordement entre l'arrivée de gaz et le tuyau de raccordement avant chaque installation. Elle doit être installée à moins de 6 po (15 cm) de l'appareil raccordé. BK Ressources fournit des Vannes à Boule si besoin. Contactez-nous pour les commander.
5. L'arrivée de gaz ne doit pas être recouverte ou cachée derrière une cloison, un placoplâtre ou un revêtement de sol.
6. **ATTENTION** - Il est très IMPORTANT de suivre les flèches indicant le sens d'écoulement du gaz sur le Raccord Rapide. Il est impératif de vérifier le sens des flèches avant toute activation.
7. **ATTENTION** - Le Raccord Rapide ne doit pas être utilisé avec un collecteur à gaz à double alimentation. Seule la Vanne à Boule doit être utilisée dans un tel cas, car, à cause de la double alimention en gaz, le Raccord Rapide empêcherait la Vanne à Boule d'agir comme dispositif de sécurité.

GAS HOSE CONNECTION KIT INSTRUCTIONS

8. Veuillez éviter de déplacer ou de faire vibrer votre appareil inutilement juste après l'installation du Tuyau de Raccordement.
9. Evitez de plier ou de tordre le Tuyau de Raccordement et les raccords. Les raccords ne doivent pas être vrillés, courbés ou soumis à une torsion excessive. Ceci risquerait d'endommager le Tuyau de Raccordement.
10. Après l'installation, les raccords doivent **ABSOLUMENT** être testés afin d'éviter toute fuite, conformément aux normes du National Fuel Gas Code ANS I Z233.1, NFPA 54, or SCA B149.1 Natural Gas and Propane Installation Code. Le risque de corrosion dû à la solution liquide utilisée pour le test peut être évité en rinçant les raccords après chaque test.
11. L'assemblage final doit **ABSOLUMENT** être testé afin d'éviter les fuites.
    ATTENTION - Ne pas utiliser de flamme nue ou d'étincelles pour tester les fuites. Rincer à l'eau après chaque test afin d'éviter toute corrosion due au liquide utilisé pour le test. Pour tout conseil sur la prévention des fuites de gaz, reportez-vous au National Fuel Gas Code, ANSI Z223.1/NFPA 54 or CSA B149.1, Natural Gas and Propane Installation Code.
12. La pression maximale à utiliser avec le Raccord Rapide est de 1/2 psi (3,5 kPa).
    Agréé pour les 1ères, 2e et 3e familles de gaz, à moins de 50 mbar (5 kPa) de pression.
13. Evitez que le tuyau ne soit en contact avec des objets ou des substances étrangères. Evitez tout contact avec quoi que ce soit de chauffé à plus de 110°C (230° F) lorsque vous utilisez le Tuyau de Raccordement.
14. Il est fortement recommandé de laisser le Tuyau de Raccordement en place une fois installé et de ne pas l'utiliser avec d'autres appareils. Le Tuyau de Raccordement et l'ensemble des pièces doivent être neufs à chaque nouvelle installation.
15. Le Raccord Rapide est constitué de pièces mobiles qui peuvent s'abîmer : **N'ESSAYEZ PAS** de le réparer. En cas de problème, coupez immédiatement l'alimentation en gaz et contactez un professionnel pour régler le problème.
16. Evitez que le Tuyau de Raccordement ne soit en contact avec des objets, des fils électriques, des substances ou des situations qui pourraient l'endommager.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

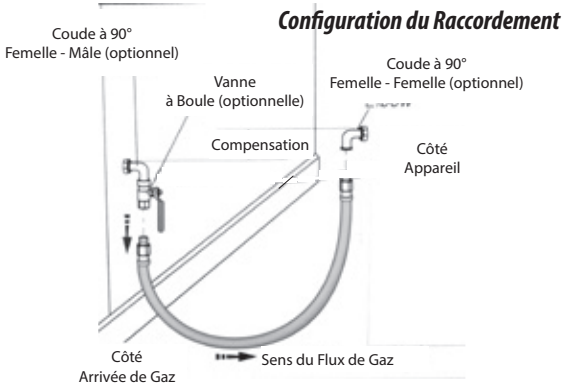

INSTRUCTIONS GÉNÉRALES D'INSTALLATION

Étape 1: Avant de commencer l'installation, il est IMPORTANT de couper l'arrivée de gaz principale et de fermer la Vanne à Boule. Il est important de le faire avant de connecter le Tuyau de Raccordement ou le Raccord Rapide, afin d'être sûr qu'il n'y ait pas de gaz qui circule. BK Ressources fournit des Vannes à Boule si besoin. Contactez-nous pour les commander.

Étape 2: En raison des obstacles entre l'arrivée de gaz et le point de raccordement de l'appareil, il est impératif de bien choisir la longueur du tuyau de gaz. L'installateur doit s'assurer de ne pas vriller, courber ou soumettre le tuyau de gaz à une torsion excessive, ce qui risquerait de l'endommager. Veuillez vous reporter à l'illustration pour choisir la disposition qui convient.

Étape 3: Incurver le tuyau de gaz permettra de réduire au minimum la distance entre l'appareil et le mur.

Options d'Installation du Raccord

Selon le modèle acheté, reportez-vous aux instructions adéquates et suivez attentivement les consignes d'installation.

Une fois que vous avez terminé cette étape, reportez-vous à la section Terminer l'Installation à la page 5 et suivez les étapes restantes.


Serrer tous les raccords à l'aide d'une clé à molette.

GAS HOSE CONNECTION KIT INSTRUCTIONS

⚠ ATTENTION

- N'utilisez pas de pâte à joint pour raccord fileté ou de ruban Teflon™ sur les extrémités évasées.
- Utilisez un couple de 100 ft / lb (135 joules) minimum lorsque vous fixez le tuyau de gaz sur le raccord.

Configuration du Raccordement

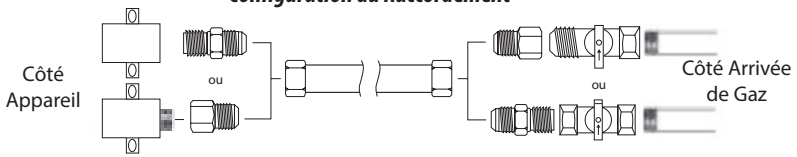

Côté Appareil

Étape 1: Déterminez quels sont les raccords mâles ou femelles nécessaires à votre installation et testez-les avant utilisation.

Étape 2: Appliquez de la pâte à joint ou du ruban Teflon™ sur les embouts filetés mâles que vous utilisez. **(ATTENTION: ne pas appliquer de joint ou de ruban sur l'extrémité évasée qui se fixera au tuyau)**

Étape 3: Fixez le raccord à l'appareil à l'aide de deux clés à molette et serrez fermement.

Étape 4: Fixez le tuyau de gaz au raccord et serrez fermement. (100 ft / lb [135 joules] de couple au minimum)*

Côté Arrivée de Gaz

Étape 1: Déterminez quels sont les raccords mâles ou femelles nécessaires à votre installation et vérifiez qu'ils soient adaptés à l'arrivée de gaz.

Étape 2: Appliquez de la pâte à joint ou du ruban Teflon™ sur les embouts filetés mâles que vous utilisez. **(ATTENTION: ne pas appliquer de joint ou de ruban sur l'extrémité évasée qui se fixera au tuyau)**

Étape 3: Fixez le raccord à l'arrivée de gaz à l'aide de deux clés à molette et serrez fermement.

Étape 4: Fixez le tuyau de gaz au raccord et serrez fermement. (100 ft / lb [135 joules] de couple au minimum)*

Étape 5: Reportez-vous à la section **Terminer l'Installation** ci-dessous et suivez les étapes restantes.

Vérifiez l'étanchéité de l'assemblage final.

Terminer l'Installation

Étape 1: Assurez-vous d'avoir fermement serré les raccords à l'aide d'une clé à molette. (100 ft / lb [135 joules] de couple au minimum)*

Étape 2: Effectuez un test d'étanchéité comme indiqué aux étapes 11-14 à la page 3.


Étape 3: Remettez l'appareil à gaz en place et assurez-vous que le tuyau soit correctement positionné et ne subisse pas de torsion ou de pliage excessif.

Vérifiez l'étanchéité de l'assemblage final.

* (ft / lb = pied-livre de couple)

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

ÉRREURS FRÉQUENTES

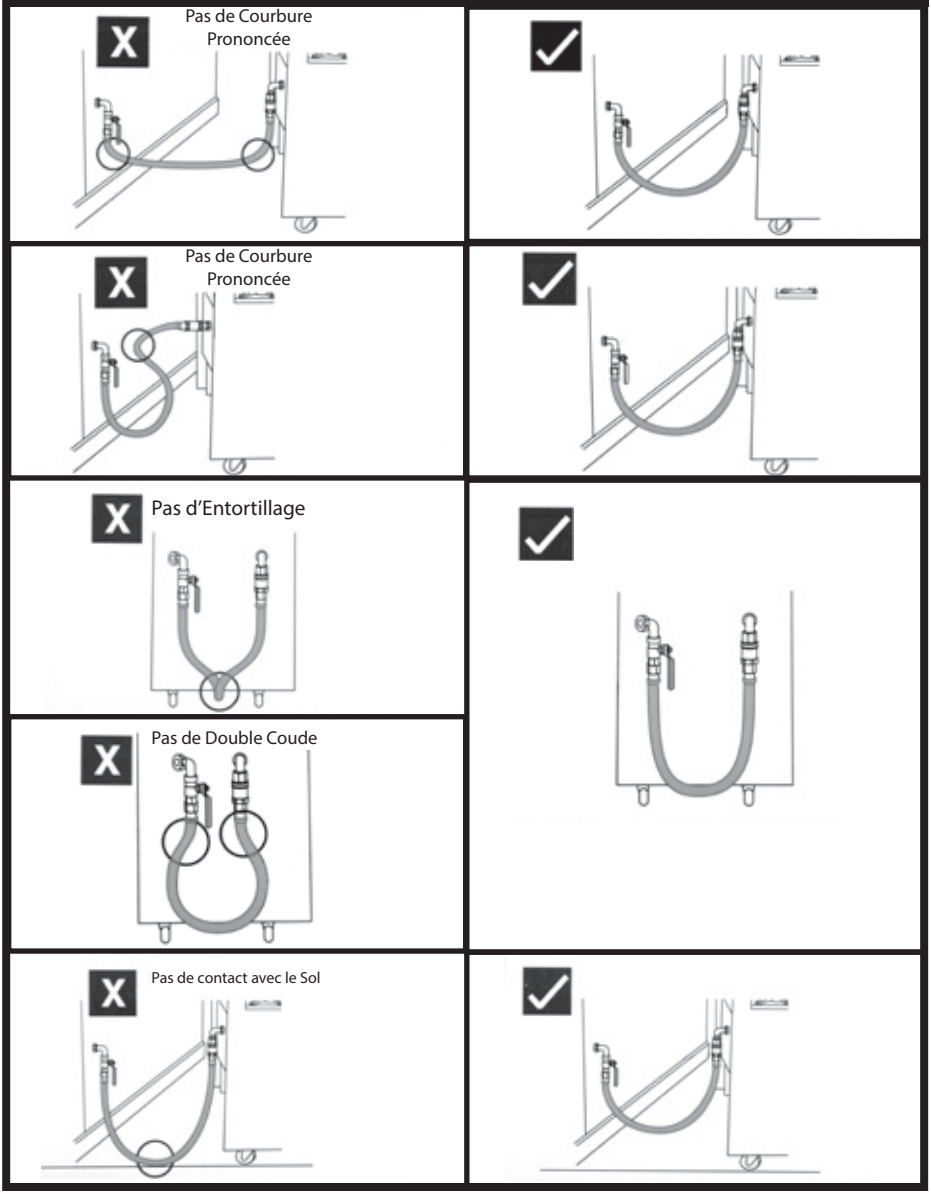

GAS HOSE CONNECTION KIT INSTRUCTIONS

Capacité Minimale du Raccordement					
Diamètre Nominal Intérieur, en Po	Capacité en flux droit - BTU/h (W), 0.64 SpG, 1000 BTU/pi3 (37.2 Mj/m3) de Gaz Chute de Pression de 0,5 po (124 Pa) de Colonne D'eau				
	Longueur du Raccordement				
	2 pi (0,6 m)	3 pi (0,9 m)	4 pi (1,2 m)	5 pi(1,5 m)	6 pi (1,8 m)
1/2 (1,27 cm)	150,000	125,000	106,000	93,200	86,600
3/4 (1,9 cm)	290,900	255,900	215,000	197,400	173,900
1 (2,54 cm)	581,800	515,900	442,700	398,900	347,800

Capacité du Raccordement avec Vanne à Boule					
Diamètre Nominal Intérieur, en Po	Capacité en flux droit - BTU/h (W), 0.64 SpG, 1000 BTU/pi3 (37.2 Mj/m3) de Gaz Chute de Pression de 0,5 po (124 Pa) de Colonne D'eau				
	Longueur du Raccordement				
	2 pi (0,6 m)	3 pi (0,9 m)	4 pi (1,2 m)	5 pi(1,5 m)	6 pi (1,8 m)
1/2 (1,27 cm)	159,000	124,000	110,000	100,000	91,000
3/4 (1,9 cm)	367,000	329,000	280,000	238,000	242,000
1 (2,54 cm)	813,000	702,000	660,000	560,000	524,000

Capacité du Raccordement avec Vanne à Boule et Raccord Rapide					
Diamètre Nominal Intérieur, en Po	Capacité en flux droit - BTU/h (W), 0.64 SpG, 1000 BTU/pi3 (37.2 Mj/m3) de Gaz Chute de Pression de 0,5 po (124 Pa) de Colonne D'eau				
	Longueur du Raccordement				
	2 pi (0,6 m)	3 pi (0,9 m)	4 pi (1,2 m)	5 pi(1,5 m)	6 pi (1,8 m)
1/2 (1,27 cm)	90,000	82,000	76,000	73,000	69,000
3/4 (1,9 cm)	208,000	195,000	184,000	168,000	168,000
1 (2,54 cm)	377,000	373,000	368,000	344,000	339,000

Tableau des capacités établi à l'aide de la norme ANSI Z21,69.

Note 1: Les capacités ont été calculées lors de tests réalisés sous les conditions spécifiées dans la norme ANSI Z21.69•CSA 6.16.

Note 2: La capacité correspondante à une chute de pression de 0,2 po (50 Pa) de colonne d'eau peut être calculée en la multipliant par 0.632.

Note 3: Pour les capacités hors-conditions du tableau ci-dessus, contactez le fabricant ou le fournisseur de gaz.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

Garantie
Le vendeur garantit à l'acheteur que ses Tuyaux de Raccordement sont exempts de tout défaut de matériau et de fabrication pendant deux ans à compter de la date d'achat. Les autres produits, Vanne à Boule, Raccord Rapide, Câble de Maintien et Matériel d'Installation, sont garantis être exempts de défauts de matériaux et de fabrication pendant un an à compter de la date d'achat. Toute réclamation doit être signalée par l'acheteur durant la période de garantie. Si tout ou partie du produit sont jugés défectueux par le vendeur après examen, ils seront réparés ou remplacés. Le remplacement du matériel ne sera effectué qu'après le retour du produit défectueux avec preuve d'achat pendant la période de garantie à l'adresse suivante : BK Resources 120 Frontage Rd, Altamont, IL 62411,USA.

Cette garantie limitée ne couvre pas les défauts ou dommages survenus pendant l'expédition ou résultant d'accidents, de modifications, de réparations non autorisées, de non-respect des instructions, de mauvais usage, d'usure ou de catastrophe naturelle.

Limitations et Exclusions de Garantie
La garantie est limitée à la réparation ou au remplacement du Tuyau de Raccordement et de toutes les autres pièces pendant la période de garantie, à la discrétion du vendeur.

Le vendeur n'aura pas obligation de réparer ou de remplacer les Tuyaux de Raccordement et toute pièce endommagés lors de l'expédition ou de l'installation s'ils n'ont pas été installés conformément aux normes établies par l'American Gas Association Standards ou, à défaut, aux normes locales d'installation du gaz.

Le vendeur n'aura aucune obligation de garantie en vertu du présent contrat si tout ou partie de l'équipement est soumis à un usage abusif, à un mauvais traitement, à la négligence, à un accident ou si l'acheteur omet d'effectuer l'une des instructions énoncées précédemment.

Limitation de la Garantie et Dénégation de Responsabilité
La garantie énoncée ci-dessus est la seule applicable à cet achat. TOUTE AUTRE GARANTIE, EXPLICITE OU IMPLICITE, Y COMPRIS, MAIS SANS S'Y LIMITER, LES GARANTIES IMPLICITES DE QUALITÉ ET DE CONFORMITÉ À UN USAGE PARTICULIER EST EXCLUE.

Proposition 65
La Propostion 65 de l'État de Californie exige que les consommateurs de Californie reçoivent une mise en garde pour toute marchandise contenant des produits chimiques pouvant provoquer le cancer, des malformations congénitales ou tout autre dommage aux facultés reproductives. L'État de Californie exige la publication de l'avis suivant : MISE EN GARDE : Ce produit contient des produits chimiques connus de l'État de Californie pour causer le cancer, des défauts de naissance et d'autres dommages aux facultés reproductives.

Limitation de Responsabilité
Il est entendu et accepté que la responsabilité du vendeur, engagée par contrat, garantie, faute, négligence ou autre, ne doit pas excéder le remplacement du produit ou de la pièce défectueux (main d'oeuvre et fret aux frais de l'acheteur) et en aucun cas le vendeur ne sera responsable de dommages exceptionnels, indirects ou accidentels. Le prix de l'équipement est à prendre en considération dans la limitation de la responsabilité du vendeur. Aucune action, quelle qu'en soit la forme, découlant de la présente transaction ne peut être intentée par l'acheteur plus d'un an après la survenance de la cause de l'action.

Limitation de Responsabilité en Matière de Dommages
LE VENDEUR ET SES EMPLOYÉS, AGENTS ET FRANCHISÉS NE SERONT EN AUCUN CAS RESPONSABLES DES DOMMAGES EXCEPTIONNELS, INDIRECTS, ACCIDENTELS OU SUBSÉQUENTS SUBIS PAR L'ACHETEUR, SES EMPLOYÉS, SES AGENTS OU TOUTE AUTRE PERSONNE, QUE CE SOIT DANS LE CADRE D'UN CONTRAT, UNE GARANTIE, UNE FAUTE, UNE NÉGLIGENCE , UNE RESPONSABILITÉ CIVILE OU TOUTE AUTRE CADRE LÉGAL.
Ces dommages comprennent, sans toutefois s'y limiter, le manque à gagner, la perte de biens, les dommages matériels et les réclamations de tiers.

Certains États n'autorisent pas les limitations ou les exclusions de responsabilité en matière de dommages accidentels ou subséquents, ou les limitations concernant la durée d'une garantie implicite, par conséquent, les limitations et exclusions ci-dessus peuvent ne pas être applicable. Étant donné que les droits varient d'un État à l'autre, il se peut que vous pouviez bénéficier de droits supplémentaires en vertu de cette garantie.

TOUTE GARANTIE, REPRÉSENTATION OU DÉCLARATION D' UN AGENT OU D'UN REPRÉSENTANT DE RESSOURCES BK QUI DIFFÈRE DE QUELQUE FAÇON QUE CE SOIT DES TERMES DE CET ACCORD ÉCRIT N'AURA AUCUNE VALEUR OU EFFET.

Garantie à Vie Limitée : Le vendeur garantit à l'acheteur que les Tuyaux de Raccordement de Gaz BK Resources ne fuiront pas lors d'une utilisation normale et pendant la durée de vie des appareils auxquels ils sont attachés. Bien qu'une fuite soit hautement improbable, un nouveau Tuyau de Raccordement sera envoyé sans frais à l'acheteur en remplacement du tuyau qui connaîtrait une fuite.

Merci d'avoir acheté ce Tuyau de Raccordement de Gaz Ressources BK de qualité supérieure.

Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394

ADDITIONAL BK RESOURCES PRODUCT

PLUMBING



COMPARTMENT SINKS



DISH TABLES



GREASE TRAPS



HAND SINKS




DROP IN SINKS



UNDERBAR EQUIPMENT



SHELVING



STAINLESS STEEL TABLES



CASTERS



Address: 120 Frontage Road Altamont, IL 62411 - **Phone:** 888-310-4393 - **Fax:** 888-310-4394
Website: www.bk-resources.com - **Email:** sales@bk-resources.com